

Filter Change Guide

Frequency is subject to change during busy holiday and event periods

It is essential to change filters on time to ensure the frames and exhaust system stay clean!!!


Do not attempt a filter change until cooking equipment has cooled down or whilst cooking equipment is turned on and hot.



ABOVE FRYER / COMBI



ABOVE GRILL ETC.

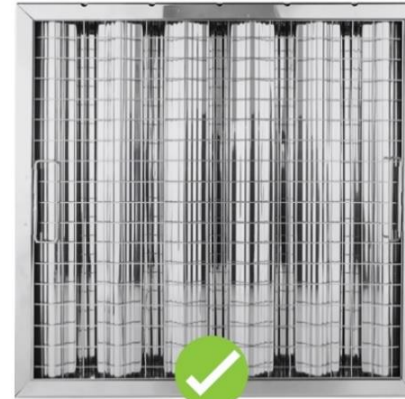

RIGHT SIDE UP



WRONG SIDE UP

GLOVES ARE ADVISABLE WHEN HANDLING FRAMES AS SHARP EDGES ARE SOMETIMES PRESENT



ALWAYS PLACE WOOL FILTER MEDIA ON THE SIDE FEATURING THE MESH & ENSURE BAFFLES RUN VERTICALLY (UP & DOWN) ON RE-INSTALLATION

SHEPHERD FILTERS take no responsibility and will not be held liable should the disposable kitchen grease filter be left in longer than the recommended guidelines. Leaving SHEPHERD FILTERS on for too long will only undermine the system and may allow grease to enter your kitchen exhaust system, increasing the risk of fire. Regular inspections and/or cleans of the kitchen exhaust system (if necessary) are recommended.

